


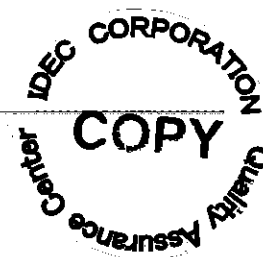

NKCR.E68961
Auxiliary Devices

Page Bottom



Auxiliary Devices

See General Information for Auxiliary Devices

IDEC CORP

E68961

6-64 NISHIMIYAHARA 2-CHOME
YODOGAWA-KU, OSAKA 532-0004 JAPAN

Trademark and/or Tradename:

**IDEC****Investigated to ANSI/UL 508**

AS-interface fail-safe monitors Model(s) SX5A-MBR01, SX5A-MBR02, SX5A-MBR03, SX5A-MBR04

AS-interfaces Model(s) FL1B-CAS2

Auxiliary Device Open type Contact Blocks Model(s) HW-U, followed by 01 or 10, may be followed by R, may be followed by MAU, may be followed by additional suffixes.

Auxiliary Device Open type Direct Adapter for illuminated models Model(s) HW-GA1N

Auxiliary Device Open type Dummy contact block Model(s) HW-DB

Auxiliary devices Model(s) HS5L- followed by A, B, C, D, F, G, H, J, DD, VA, VB, VC, VD, VF, VG, VH, VJ, TA, TB, TC, TD, TF, TG, TH, TJ, XA, XB, XC, XD, XF, XG, XH or XJ, followed by 4 or 7Y, maybe followed by 0 or 4, maybe followed by L, maybe followed by 01 to 99, maybe followed by M, SM, SG, SP, SR or SL, maybe followed by G or R, maybe followed by 1, 2 or 3, maybe followed by additional suffixes.

Auxiliary Device: Open type Pilot Lights Model(s) AP22M, followed by 2 or 2T, followed by Q, followed by 3, 4, H, H2, M, M3 or M4, may be followed by any letters and/or numbers

Cam switches Model(s) ACSNK+, ACSNO+, UCSQM+, UCSQO+

Contact blocks, "CW Series" Model(s) CW-E01, CW-E10

Contact blocks, open type Model(s) HW-S01+, HW-S01R+, HW-S10+, HW-S10R+

Control box enclosures, indoor use only, use with type 4X rated auxiliary devices Model(s) FB Series

Direct adapter LED pilot lights, "CW Series" Model(s) CW-EAQ2, CW-EAQ3, CW-EAQ4, CW-EAQH, CW-EAQM, CW-EAQM4

Direct Adaptor LED pilot lights, complete devices Model(s) CW Series, followed by 1 or 4, followed by P, followed by 1 or 2, followed by E, followed by Q2, Q3, Q4, QH, QM or QM4.+

Dual Pushbutton switch Model(s) Type HW, followed by 7, followed by D, followed by any suffixes.


Enabling switches, grip type Model(s) HE1G, may be followed by -L, followed by 2, followed by 0, 1, 1S, 2, 2S or 11S, followed by M, may be followed by E, B, AB, L, AL or P, may be followed by B, N, 1Y, 1B or 1N, may be followed by Y, B, N, R or W, may be followed by Y, B, N, R or W.

HW Series alternate designations, CED lamps Model(s) LSTDB-2

HW Series alternate designations, connecting units Model(s) HW-CB1, HW-CB2, HW-CBL

HW Series alternate designations, contact blocks Model(s) HW-C01, HW-C01R, HW-C10, HW-C10R, HW-F01, HW-F01R, HW-F10, HW-F10R, HW-G01, HW-G01R, HW-G10, HW-G10R

HW Series alternate designations, direct adapters Model(s) HW-DA1, HW-DA1F, HW-GA1, HW-GA1F, TW-DA1, TW-DA1F, TW-GA1, TW-GA1F

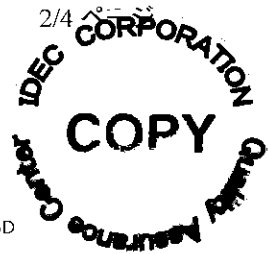

HW Series alternate designations, dummy blocks Model(s) TW-DB

HW Series alternate designations, incandescent lamps Model(s) LS-2, LS-3, LS-6, LS-8, LSB-2

HW Series alternate designations, LED lamps Model(s) LSPD-1, LSPD-2, LSPD-6, LSPD-6D, LSTD-1, LSTD-2, LSTD-6, LSTD-6D

HW Series alternate designations, transformers for illuminated type switches Model(s) HW-L, HW-T, TW, TWS

HW Series alternate designations, transformers for pilot lights Model(s) HW-F, HW-M, HW-R

HW Series, contact blocks Model(s) HW, followed by -C or -F, followed by B or L, followed by 0, 1, 2, 3, 4, 5, 6, 7, 8 or 9, followed by 0, 1, 2, 3, 4 or S, may be followed by -xxxxxx (internal tracking), for use with manufacturer's operator units and/or lamps.

HW Series, pilot lights without transformers Model(s) HW-P

HW Series, transformers for pilot duty, for use with operator units and lamps Model(s) HW-F, HW-M, HW-R

Illuminated display lights Model(s) SLD, followed by 30, 44, 48 or 72, followed by manufacturer's control code, followed by 1, 2 or 3, followed by DH6, DH1, DH2, DW2, DHM1, DHM6, DHM2, TH1, TH2, TH12 or TH24, followed by B or N, followed by blank, S or T, followed by R, G, A, Y, W, S, PW or RG.

Illuminated push-button switches, complete devices Model(s) CW Series, followed by 1 or 4, followed by L, followed by M or A, followed by 1 or 2, followed by E, followed by 0, 1 or 2, followed by 0, 1 or 2, followed by Q2, Q3, Q4, QH, QM or QM4.+

LED illuminated display lights, "LH Series" Model(s) LH1D, followed by D2 or H2, may be followed by Z, M or N, followed by L, P or H, followed by Q4, followed by C05, C10, C20, C30 or C50, followed by R, A, W, Y, G, S, PW or ##, may be followed by W.+

LH1D, followed by D3, may be followed by Z, M or N, followed by L, P or H, followed by Q4, followed by C05, C10, C20, C30, C50, CN1 or CN2, followed by R, A, W, Y, G, S, PW or ###, may be followed by W.+

Locking switches, enclosed type Model(s) HS6E-, followed by A, B, C, D, L, M, N, P, DD, DM, DP, VA, VB, VC, VD, VL, VM, VN or VP, followed by 4 or 7Y, may be followed by 0 or 4, may be followed by B or R, maybe followed by 01 thru 99, maybe followed by R, G, A or Y.+

Mono-lever operators, for use with contact block BR Model(s) ARN, may be followed by S or L, followed by 1, 2, 3 or 4, may be followed by numbers and/or letters.

Mono-Lever Switch Model(s) Type HW, followed by 1 or 4, followed M, followed by any suffixes.

N Series (panel cutout dimensions-30mm diam) illuminated push button switches Model(s) ABLN, AL*N, ALLN, ALN, ALNE, AOL*N, AOLN, AOLNE, ULQN, UOLQN

N Series (panel cutout dimensions-30mm diam) pilot lights Model(s) APN, APNE, APNG, APNGE, UPQN, UPQNE

N Series (panel cutout dimensions-30mm diam) push button switches Model(s) AB, AO, AT, UB, UO, UT, UW or ABB, may be followed by Q, followed by N.

N Series (panel cutout dimensions-30mm diam) selector push button switches Model(s) ABN, may be followed by 6, 7 or 9, may be followed by L.

N Series (panel cutout dimensions-30mm diam) selector switches Model(s) ASN, ASTN

Pilot light units Model(s) HW, may be followed by 1 or 2, may be followed by P, may be followed by 1 or 2, followed by J, followed by Q, RH or CM, may be followed by 0, 2, 3 or 4, may be followed by one to three letters, may be followed by additional letter(s) and/or number(s), including hyphens.

Pilot Light with or without Transformer Model(s) Type HW?P, HW1P-5Q4, HW1P-5Q7.

Proximity switches Model(s) HS7A-DMC50010, HS7A-DMC5002, HS7A-DMC5005, HS7A-DMC50110, HS7A-DMC5012, HS7A-DMC5015, HS7A-DMC59010, HS7A-DMC5902, HS7A-DMC5905, HS7A-DMC59110, HS7A-DMC5912, HS7A-DMC5915, HS7A-DMC70010, HS7A-DMC7002, HS7A-DMC7005, HS7A-DMC70110, HS7A-DMC7012, HS7A-DMC7015, HS7A-DMC79010, HS7A-DMC7902, HS7A-DMC7905, HS7A-DMC79110, HS7A-DMC7912, HS7A-DMC7915, HS7A-DMP50010, HS7A-DMP5002, HS7A-DMP5005, HS7A-DMP50110, HS7A-DMP5012, HS7A-DMP5015, HS7A-DMP59010, HS7A-DMP5902, HS7A-DMP5905, HS7A-DMP59110, HS7A-DMP5912, HS7A-DMP5915, HS7A-DMP70010, HS7A-DMP7002, HS7A-DMP7005, HS7A-DMP70110, HS7A-DMP7012, HS7A-DMP7015, HS7A-DMP79010, HS7A-DMP7902, HS7A-DMP7905, HS7A-DMP79110, HS7A-DMP7912, HS7A-DMP7915

Push button switches Model(s) XN, followed by 4, followed by S, may be followed by B, L or T, followed by L, followed by 4, followed by 0 thru 3, followed by 1 thru 4, may be followed by Q1 thru Q4, followed by M or MF, followed by R, RH, N, Y, B, G, W or S.

XW1E or XA1E, followed by -BV, -LV or -TV followed by 3 or 4, followed by 0 thru 3, followed by 1 thru 4, may be followed by Q4, Q3, Q2 or Q1, may be followed by V, followed by R, N, Y, B, G, W or S.

Push buttons Model(s) XN Series, XW Series

Push-button switches, complete devices Model(s) CW Series, followed by 1 or 4, followed by B, followed by M or A, followed by 1 or 2, followed by E, followed by 0, 1, 2 or 3, followed by 0, 1, 2 or 3.+

Pushbutton switch or Illuminated Pushbutton Switch Model(s) Type HW, followed by 1, 2, 3 or 4, followed by B or L, followed by any suffixes.