

Analog I/O Module Specifications

General Specifications (END Refresh Type)

Type No.	FC4A-L03A1	FC4A-L03AP1	FC4A-J2A1	FC4A-K1A1
Rated Power Voltage	24V DC			
Allowable Voltage Range	20.4 to 28.8V DC			
Terminal Arrangement	See Analog I/O Module Terminal Arrangement on pages 2-64 to 2-67.			
Connector on Mother Board	MC1.5/11-G-3.81BK (Phoenix Contact)			
Connector Insertion/Removal Durability	100 times minimum			
Internal Current Draw	50 mA (5V DC) 0 mA (24V DC)	50 mA (5V DC) 0 mA (24V DC)	50 mA (5V DC) 0 mA (24V DC)	50 mA (5V DC) 0 mA (24V DC)
External Current Draw (Note 1)	50 (45) mA (Note 2) (24V DC)	50 (40) mA (Note 2) (24V DC)	40 (35) mA (Note 2) (24V DC)	40 mA (24V DC)
Weight (Approx.)	100g (85g) (Note 2)			

Note 1: The external current draw is the value when all analog inputs are used and the analog output value is at 100%.

Note 2: Values in () represent analog I/O modules earlier than version 200. For analog I/O module version, see page 2-56.

General Specifications (Ladder Refresh Type)

Type No.	FC4A-J4CN1	FC4A-J8C1	FC4A-J8AT1
Rated Power Voltage	24V DC		
Allowable Voltage Range	20.4 to 28.8V DC		
Terminal Arrangement	See Analog I/O Module Terminal Arrangement on pages 2-64 to 2-67.		
Connector on Mother Board	MC1.5/10-G-3.81BK (Phoenix Contact)		
Connector Insertion/Removal Durability	100 times minimum		
Internal Current Draw	50 mA (5V DC) 0 mA (24V DC)	40 mA (5V DC) 0 mA (24V DC)	45 mA (5V DC) 0 mA (24V DC)
External Current Draw (Note)	55 mA (24V DC)	50 mA (24V DC)	55 mA (24V DC)
Weight	140g	140g	125g

Type No.	FC4A-K2C1	FC4A-K4A1
Rated Power Voltage	24V DC	
Allowable Voltage Range	20.4 to 28.8V DC	
Terminal Arrangement	See Analog I/O Module Terminal Arrangement on pages 2-64 to 2-67.	
Connector on Mother Board	MC1.5/10-G-3.81BK (Phoenix Contact)	MC1.5/11-G-3.81BK (Phoenix Contact)
Connector Insertion/Removal Durability	100 times minimum	
Internal Current Draw	60 mA (5V DC) 0 mA (24V DC)	65 mA (5V DC) 0 mA (24V DC)
External Current Draw (Note)	85 mA (24V DC)	130 mA (24V DC)
Weight (Approx.)	110g	100g

Note: The external current draw is the value when all analog inputs are used and the analog output value is at 100%.

2: MODULE SPECIFICATIONS

Analog Input Specifications (END Refresh Type)

Type No.	FC4A-L03A1 / FC4A-J2A1		FC4A-L03AP1		
Analog Input Signal Type	Voltage Input	Current Input	Thermocouple	Resistance Thermometer	
Input Range	0 to 10V DC	4 to 20 mA DC	Type K (0 to 1300°C) Type J (0 to 1200°C) Type T (0 to 400°C)	Pt 100 3-wire type (-100 to 500°C)	
Input Impedance	1 MΩ minimum	250Ω	1 MΩ minimum	1 MΩ minimum	
Allowable Conductor Resistance (per wire)	—	—	—	200Ω maximum	
Input Detection Current	—	—	—	1.0 mA maximum	
AD Conversion	Sample Duration Time	10 (20) ms (Note 1)		10 (20) ms (Note 1) 20 ms	
	Sample Repetition Time	20 ms		20 ms 40 (20) ms (Note 1)	
	Total Input System Transfer Time (Note 2)	60 (105) ms + 1 scan time (Note 1)		60 (200) ms + 1 scan time (Note 1) 80 (200) ms + 1 scan time (Note 1)	
	Type of Input	Single-ended input	Differential input		
	Operating Mode	Self-scan			
	Conversion Method	ΣΔ type ADC			
Input Error	Maximum Error at 25°C	±0.2% of full scale		±0.2% of full scale + cold junction compensation error (±4°C maximum) ±0.2% of full scale	
	Temperature Coefficient	±0.006% of full scale/°C			
	Repeatability after Stabilization Time	±0.5% of full scale			
	Non-linearity	±0.2% of full scale			
	Maximum Error	±1% of full scale			
Data	Digital Resolution	4096 increments (12 bits) 13,000 increments maximum (14 bits) (Note 3)			
	Input Value of LSB	2.5 mV	4 μA	K: 0.100°C/0.180°F (0.325°C) J: 0.100°C/0.180°F (0.300°C) T: 0.100°C/0.180°F (0.100°C) (Note 3)	0.100°C/0.180°F (0.150°C) (Note 3)
	Data Type in Application Program	Default: 0 to 4095 Optional: -32768 to 32767 (selectable for each channel) (Note 4)			
	Monotonicity	Yes			
	Input Data Out of Range	Detectable (Note 5)			

Type No.		FC4A-L03A1 / FC4A-J2A1		FC4A-L03AP1	
Analog Input Signal Type		Voltage Input	Current Input	Thermocouple	Resistance Thermometer
Noise Resistance	Maximum Temporary Deviation during Electrical Noise Tests	±1% maximum (when 1 kV is directly applied to the power supply line and a 1 kV clamp voltage is applied to I/O lines)			
		(±3% maximum) (Note 1) (when a 500V clamp voltage is applied to the power supply and I/O lines)			(Not assured) (Note 1)
	Input Filter	No			
	Recommended Cable for Noise Immunity	Twisted pair shielded cable		—	
	Crosstalk	2 LSB maximum			
Isolation		Between input and power circuit: Between input and internal circuit:		Transformer isolated Photocoupler-isolated	
Effect of Improper Input Connection		No damage			
Maximum Permanent Allowed Overload (No Damage)		13V DC	40 mA DC	—	
Selection of Analog Input Signal Type		Using programming software			
Calibration or Verification to Maintain Rated Accuracy		Not possible			

Note 1: Values in () represent analog I/O modules earlier than version 200. For analog I/O module version, see page 2-56.

Note 2: Total input system transfer time = Sample repetition time + Internal processing time



Note 3: Minimum values represent analog input data in Celsius and Fahrenheit. Values in () represent analog I/O modules earlier than version 200.

Note 4: The data processed in the analog I/O module can be linear-converted to a value between -32768 and 32767. The optional range designation, and analog I/O data minimum and maximum values can be selected using data registers allocated to analog I/O modules. See page 9-13.

Note 5: When an error is detected, a corresponding error code is stored to a data register allocated to analog I/O operating status. See page 9-7.

FC4A-J2A1 (Analog Input Module) — Screw Terminal Type



Applicable Terminal Block: **FC4A-PMT11P (supplied with the analog input module)**

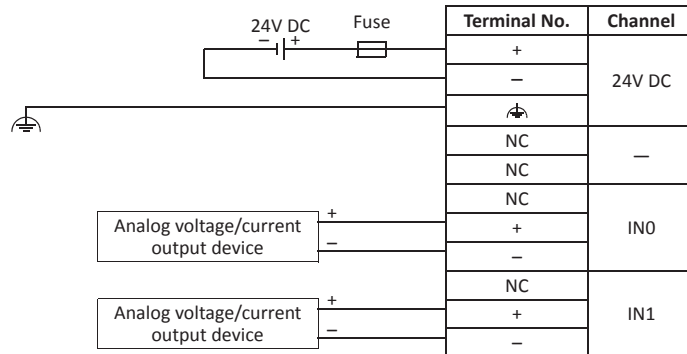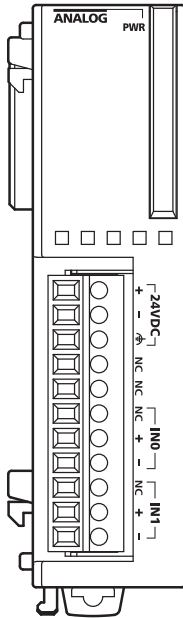

- Connect a fuse appropriate for the applied voltage and current draw, at the position shown in the diagram. This is required when equipment containing the MicroSmart is destined for Europe.
- Do not connect any wiring to unused terminals.
- When the analog I/O module may malfunction due to noise, use the shielded cable for the analog input and output and connect both ends of the shield to a ground.

FC4A-J4CN1 (Analog Input Module) — Screw Terminal Type

Applicable Terminal Block: **FC4A-PMT10P (supplied with the analog input module)**

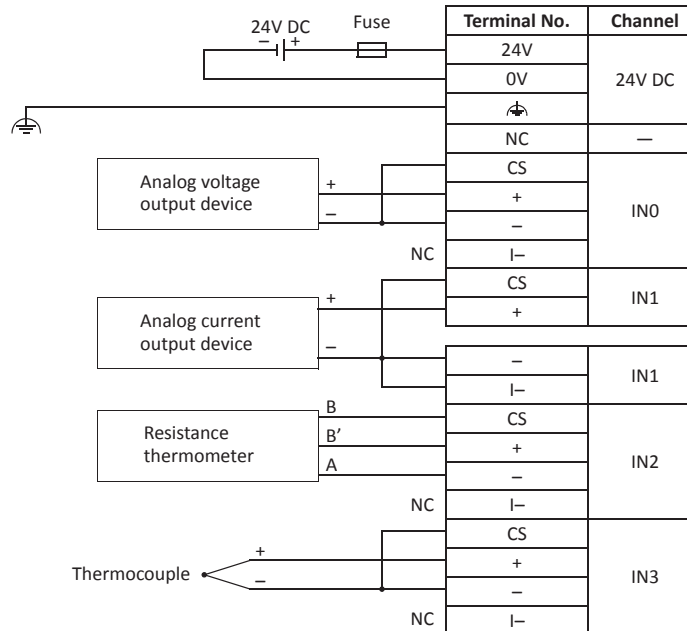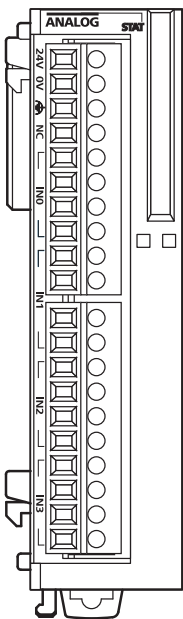

- Connect a fuse appropriate for the applied voltage and current draw, at the position shown in the diagram. This is required when equipment containing the MicroSmart is destined for Europe.
- When connecting a resistance thermometer, connect three wires B, B', and A to the CS (current sense), +, and - terminals of input channels IN0 through IN3, respectively.
- When connecting a thermocouple, connect the + wire to the + terminal and the - wire to the CS and - terminals.
- Do not connect the thermocouple to a hazardous voltage (60V DC or 42.4V peak or higher).
- Do not connect any wiring to unused terminals.
- - terminals of input channels IN0 through IN3 are interconnected.
- When the analog I/O module may malfunction due to noise, use the shielded cable for the analog input and output and connect both ends of the shield to a ground.